



## SETTING THE SYSTEM CLOCK

- Step 1 Enter **\*** **9** **7** . The LCD Screen will prompt for a code.
- Step 2 Enter [**master code**]. The time and date will be displayed with the current hour flashing.
- Step 3 Use the **▲** **▼** scroll keys to select the proper hour.
- Step 4 Press the **\*** key to move to the minutes, day of week, date, month, and year.
- Step 5 Repeat Steps 3 and 4 until the entire time and date are set.

## USING THE DOOR CHIME FEATURE

The door chime is turned on or off by pressing the [**CHIME**] key. If the chime is on, the *chime light* will be illuminated. If the chime is off, the *chime light* will be off. Each press of the [**CHIME**] key will toggle the chime feature on/off and produce a momentary ding-dong sound.