



TEST FUNCTION

If programmed, this function will perform a battery test, communicator test, and/or a siren test. No alarms will be sent, and no reports will be sent unless a communicator test is performed, in which case a test signal will be sent.

Step 1 Press * 4 4 . The test will be performed as programmed.

Step 2 If the siren test is performed, enter a user code to silence the siren.